

Constant Monitor Tester

The wrist strap, mat and Earth Constant Monitor is designed to continuously monitor whether the wrist strap, bench mat or the earth is disconnected whilst simultaneously checking the Earth to ground system is working correctly.

Should any part of the ESD system fail a red LED indicator will illuminate and a buzzer sound. That part of the system should be checked using the appropriate test equipment before continuing with manufacture. (UK) Power Supply included.

The unit is in standby mode until the wristband is plugged into the monitor.



Technical Properties	
Upper Limit	35Meg +/-10%
Lower Limit	750k +/-10%
Ground Threshold	68k +/-5%
Mat Threshold	2M2 +/-5%
Power	110/220V Power Supply

Product Code	Description	Size (mm)	Additional notes
093-0086	Slimline Dual Line Constant Monitor	124 x 49 x 25	Each (UK) Power Supply included

Important Notice: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © Antistat 2020.

Constant Monitor Tester


Audible alarm on Earth, ground, mat or wrist strap connection fail.



The In-Line wrist strap, mat and Earth Constant Monitor is designed to continuously monitor whether the wrist strap, bench mat or the Earth is disconnected whilst simultaneously checking the Earth to ground system is working correctly. Should any part of the ESD system fail a red LED indicator will illuminate and a buzzer sound. That part of the system should be checked using the appropriate test equipment before continuing with manufacture.

Features

- Automatically enters standby mode when wrist strap cord is removed
- Indicates 'high' or 'low' fail for the users wrist strap

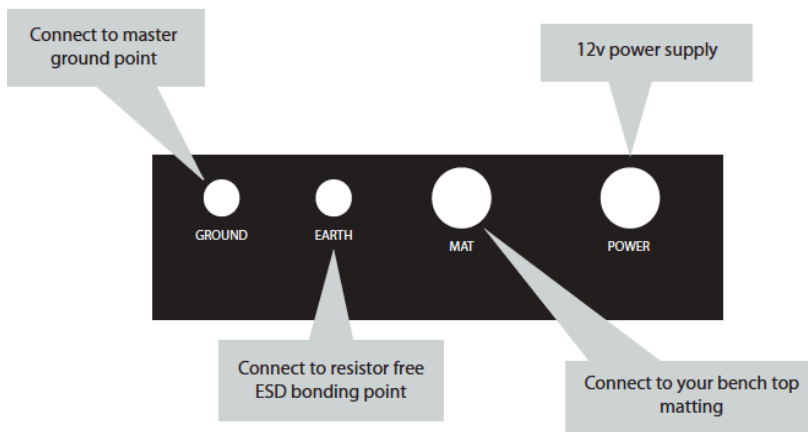

Note:

The ground and Earth connections must be on separate systems to ensure proper monitoring. Earth, ground and mat connections **MUST** be made via 0 ohm cables (2 supplied in kit).



Buy online at
www.antistat.com



Call us on
+44 (0)1473 836 200



Email us at
info@antistat.com



Message us on Live Chat
www.antistat.com

Important Notice: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © Antistat 2020.