

Monitored Workstation Kit

INSTRUCTION SHEET

KIT INCLUDES

- A. 1x ESD Caution Sign 300mm x 150mm, GB
- B. 1x ESD Matting (600x900mm) with 4x10mm stud in each corner
- C. 1x UK Earth Bonding Plug 2x M5 Post
- D. 1x Economy Wriststrap and Lead Set - 10mm to Banana
- E. 1x 10ft Ground Cord Double Jack Socket with Ring Terminal and 10mm Female Stud
- F. 1x Continuous Wrist Strap and Bench Monitor with Lead
- G. 1x Instruction Leaflet


Notes: Wristband must be checked regularly for continuity. Products are labelled below via lettered key above.

INSTRUCTIONS


STEP 1. Affix signage within EPA.




STEP 2. Place mat on bench.

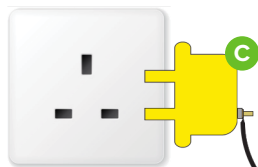


STEP 3. Plug in ESD bonding plug to mains power.

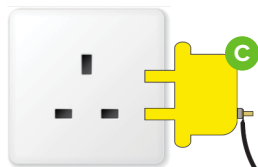

STEP 4. Connect plug to the mat using studs on straight earth lead via the dual jack socket.

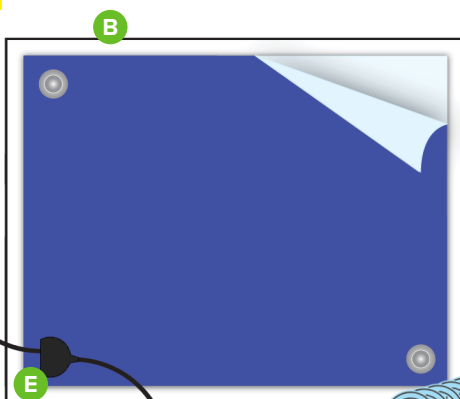

STEP 5. Connect mat to the continuous monitor via the dual jack socket.

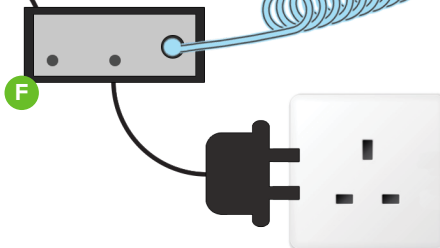

STEP 6. Place wristband on wrist and ensure the 10mm stud end of coiled lead is fastened securely.



STEP 7. Connect wristband to continuous monitor using banana connection at end of coiled lead.

STEP 8. Connect continuous monitor to power supply.

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The information is subject to change without notice and replaces all data sheets previously supplied. The information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2023 Antistat.

CONTINUOUS MONITOR SET-UP

Installation

1. Check that you have received all parts: monitor, power/ground adapter and the adhesive pad.
2. Using the pad, mount the monitor under the work bench. (Other suggested mounting locations include the bench top and under bench shelving.)
3. Plug in the power/ground adapter.



Operation

1. Place a wristband on your wrist and plug the coiled cord banana plug into the monitor's banana jack. The monitor will display a green light when a functional wrist strap with good skin contact is connected to the unit.
2. Connect the monitor to the dual jack socket.
3. Connect dual jack socket to earth bonding plug.
4. The unit will sound an alarm and display a red light if the wrist strap becomes defective or if the person is not in contact with the wristband.
5. Unplug the wrist strap coiled cord from the unit to stop the alarm.
6. Monitor will alarm if the continuity from the monitor to the mat to ground is lost.

PRODUCT CODE	DESCRIPTION	NOTES
069-0009	Monitored Workstation Kit	Each

To request a quotation or for more information, please call **+44 (0)1473 836200**
email info@antistat.co.uk or visit www.antistat.co.uk

IMPORTANT: This data sheet and its contents (the "Information") belong to Antistat or are licensed to it. No licence is granted for the use of it other than for information purposes in connection with the products to which it relates. No licence of any intellectual property rights is granted. The Information is subject to change without notice and replaces all data sheets previously supplied. The Information supplied is believed to be accurate but Antistat assumes no responsibility for its accuracy or completeness, any error in or omission from it or for any use made of it. Users of this data sheet should check for themselves the Information and the suitability of the products for their purpose and not make any assumptions based on information included or omitted. Liability for loss or damage resulting from any reliance on the Information or use of it (including liability resulting from negligence or where Antistat was aware of the possibility of such loss or damage arising) is excluded. © 2023 Antistat.